


# 2-minute pen test: how far forward can the pod go?

Print at 100 % (actual size, no "fit to page"). Check: the bar below must measure exactly 10 mm with a ruler.

■ = 10 mm

## RESULT MAP

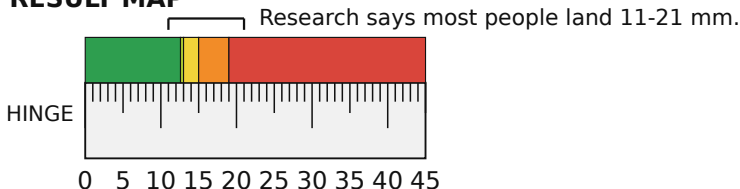

mm from the hinge (cut out or lay along the arm; 0 = hinge)

← the pen slides this way, from your ear toward the hinge

## Where you first see the pen decides the pod:

|                 |                                                      |
|-----------------|------------------------------------------------------|
| ■ Up to 12.6 mm | Slim pod as is.                                      |
| ■ 12.6 to 13 mm | Slim pod, small trims.                               |
| ■ 13 to 15 mm   | Slim pod, boards re-laid (a bit shorter).            |
| ■ 15 to 19 mm   | Slim pod + a shorter custom battery (8 h, no spare). |
| ■ Over 19 mm    | The thicker 8.5 mm pod.                              |

## Steps

- 1 Put your glasses on. Look straight ahead at one spot and keep your eyes there.
- 2 Your helper holds a pen by its far end and slides the tip forward along the arm, starting at your ear.
- 3 Say "now" the moment you first see the tip. Helper stops, marks the arm, reads the mm from the ruler (0 = hinge). Write it here:  
\_\_\_\_\_ mm

Repeat 3 times and average. Spec s8, test E10.